



## 1 Row Cable Installation Notes:

### HARDWARE INSTALLATION TIPS:

**IMPORTANT!** It is recommended to install horizontal wire, then vertical hangers and then tension horizontal wire until taught. **DO NOT OVERTIGHTEN OR OVERTENSION HORIZONTAL WIRE! (100ftlbs max)** Diligently adjust vertical hangers so that the horizontal wire is not pulled upward at vertical hanger point causing “peaks and valleys”. If the horizontal wire is continuously level the finished look of the installation will be optimum. TIGHTEN ALL WIRE LOCKNUTS ON VERTICAL SUPPORTS AND HORIZONTAL CABLE PRIOR TO INSTALLING DUCTS.

### DUCT INSTALLATION TIPS:


- Use gloves provided with to prevent stains or dirt transfer on ducts.
- **Do not lay out the duct on the floor**, install hanging hardware first and then take the duct out of the box and install directly on horizontal wire.
- After fabric diffuser is completely installed and inflated place a provided wire lock nut on the horizontal wire by the last clip by the endcap. In this way the last clip on the duct cannot slide backward toward to the inlet after the fan turns off, improving the look of the fabric diffuser with no airflow.
- Scan QR code with smart phone for installation animation:




For any questions during installation call toll free 855-774-4632 or visit our website [www.přihoda.com](http://www.přihoda.com) where installation animations can be viewed.

# MOUNTING INSTRUCTION for Instalation 1 - single suspension, plastic hooks, wire, wire hanger


# Tailor-made Air Ducting&Diffusers

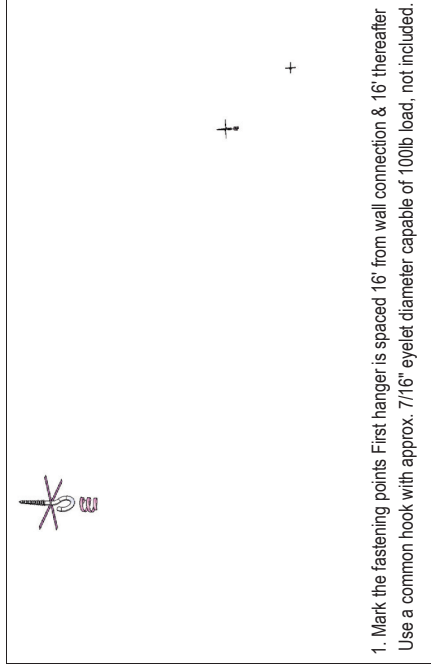


1. Mark the fastening points First hanger is spaced 16" from wall connection & 16" thereafter Use a common hook with approx. 7/16" eyelet diameter capable of 100lb load, not included.

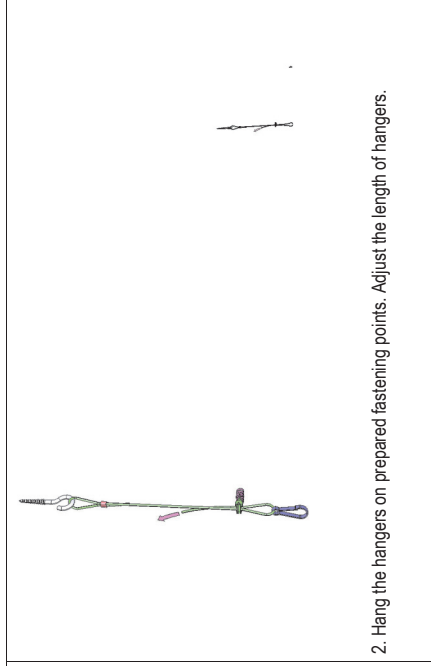


2. Hang the hangers on prepared fastening points. Adjust the length of hangers.

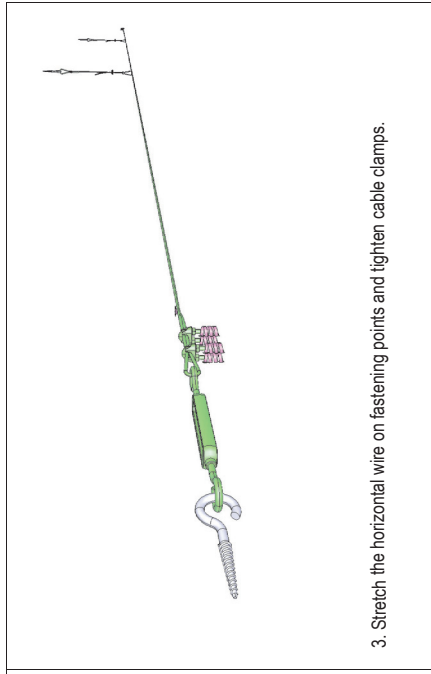


3. Stretch the horizontal wire on fastening points and tighten cable clamps.

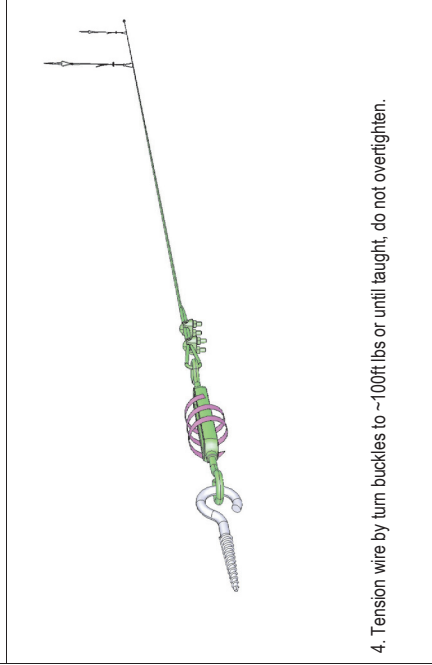


4. Tension wire by turn buckles to ~100ft lbs or until taut, do not over-tighten.

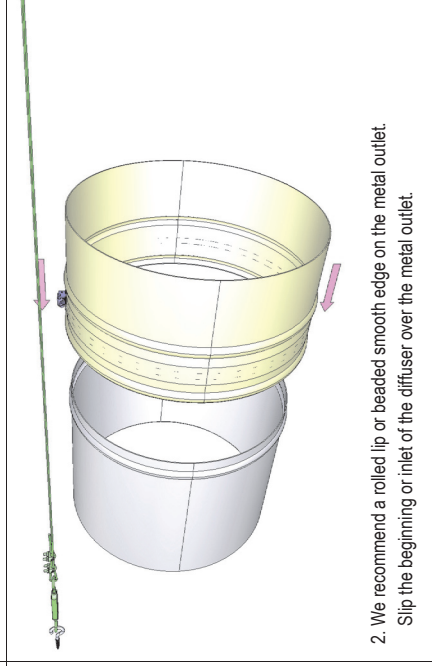


2. We recommend a rolled lip or beaded smooth edge on the metal outlet. Slip the beginning or inlet of the diffuser over the metal outlet.

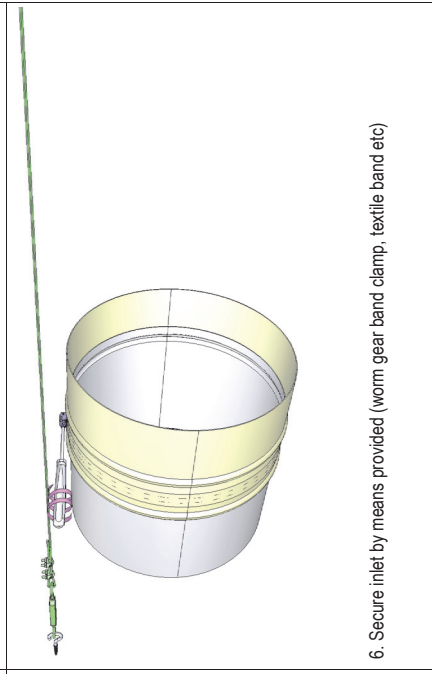


6. Secure inlet by means provided (worm gear band clamp, textile band etc)

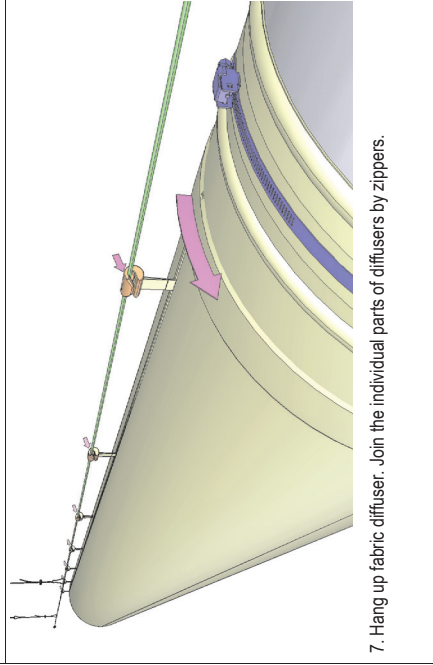

7. Hang up fabric diffuser. Join the individual parts of diffusers by zippers.

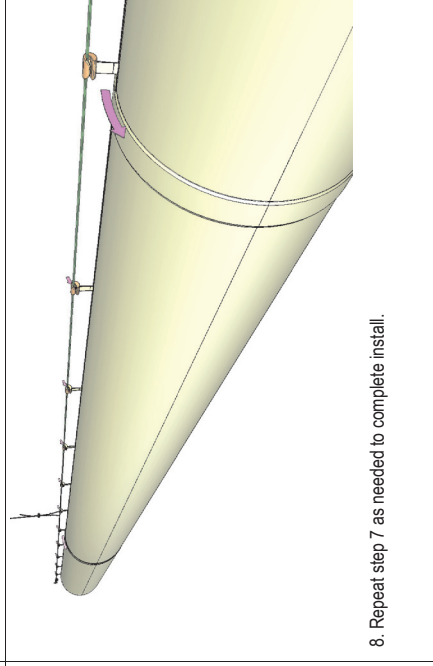

8. Repeat step 7 as needed to complete instal.

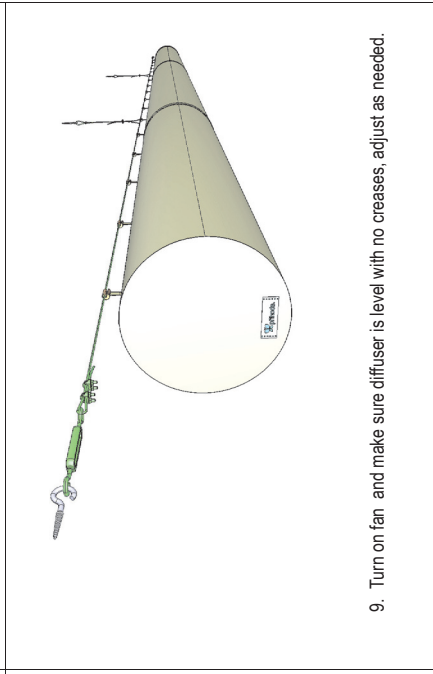

9. Turn on fan and make sure diffuser is level with no creases, adjust as needed.